



BOSS Digital Pressurisation Equipment

AX Models (AX1-2.5E, AX2-2.5E, AX1-5E, AX2-5E)
PF Models (PF1-2.5E, PF2-2.5E, PF1-5E, PF2-5E, PF2-8E)
Midi Models (MD1-2.5E, MD2-2.5E, MD1-5E, MD2-5E)
Mini Models (MX1-3E, MX2-3E)

Operation & Maintenance

Manual



Contents

Customer Details.....	3
Commissioning Record	4
About this Manual	5
Pressures In A Sealed System.....	6
Equipment Overview	7
Installation	8
Flow Restrictors (Mini & Midi Models Only).....	9
AX Skid Clearance and Connection Requirements.....	10
PF Clearance and Connection Requirements.....	11
Midi (MD) Clearance and Connection Requirements	12
Mini (MX) Clearance and Connection Requirements.....	13
Electrical Power Supply	14
Micro Controller.....	15
Commissioning.....	16
Controller Overview	17
Controller Programming	18
Program List.....	19
Hydraulic Commissioning.....	22
Operation	27
Shutdown procedure.....	28
Start-up Procedure.....	28
Maintenance	29
Wiring diagram.....	31
Spare Parts	32
AX Models (1-2.5E, 2-2.5E, 1-5E, 2-5E)	33
PF Models (1-2.5E, 2-2.5E, 1-5E, 2-5E, 2-8E).....	34
BOSS Midi (MD) (1-2.5E, 2-2.5E, 1-5.0E, 2-5.0E)	36
Mini Models (MX1-3E, MX2-3E)	37
Troubleshooting.....	38
Service Logs	41
Warranty Details.....	42
Contact Details.....	42



Customer Details

Please fill in information future reference:

Company:

Contact:

Address:

Tel No:

Fax No:

Post Code:

E-mail:

Equipment Details

Details of model and serial number may be found on the label

Model:

Serial No:

Purchase date:

Purchase From:

Note:

It is highly recommended to have this equipment commissioned by a BOSS approved engineer. Any damage or loss incurred through incorrect commissioning by an unapproved engineer will not be covered by the warranty. If you wish for BOSS to arrange this please contact us. (See contact details)

Please see the warranty section for details.

Remember to fill in details for future use for re-commission unit.



Commissioning Record

Site Reference					
Model				Date	
Engineer Name				Company	
Standard Settings			Extended Engineers Settings		
Cold Fill		bar		Pumps Number	
High Set		bar		Pump Type	(0/1/2)
Low Set		bar		Pump Sense	(Y/N)
Differential		bar		Sensor Type	(0/1/2)
Flood Limit		Minutes		SPC Controller	(Y/N)
Pump 1 Count				Additive	(Y/N)
Pump 1 Hours		Hours		Id Number	
Pump 2 Count				Relay Inversion	(Y/N)
Pump 2 Hours		Hours		Overrun	Seconds
Alarm Count				Pressure Alarm Auto Reset	(Y/N)
Power Interrupted				Boost	(Y/N)
Pulse		(Y/N)		Cascade	(Y/N)
Excessive Start		(Y/N)		Solenoid Controller	(Y/N)
Service		(Y/N)			
Fill System		(Y/N)			

Expansion Vessel Volume		litres		Gas Pre-Charge		bar
Safety Relief Valve Setting		bar				

Notes

Engineers Signature		Date	
Customers Signature		Date	

About this Manual

This Operation and Maintenance Manual contains all the necessary information to install, commission, operate and maintain Flexfiller pressurisation equipment.

It is recommended to read all parts of this manual before undertaking any work on the equipment.

Conventions used in this Manual

This manual makes use of symbols to identify key pieces of information. Please take note of the following symbols and their meaning:



DANGER – Important safety related information intended to prevent injury and/or damage to the equipment, system or property.



CAUTION - Important information intended to prevent damage to the equipment, system or property.



IMPORTANT - Important information intended to ensure that the equipment functions correctly.



USEFUL – Useful information which may be helpful, but is not necessarily required for the unit to function correctly.

Typography

This manual makes use of different typography to identify different types of information.

<i>Italics</i>	Key words and phrases
(Round Brackets)	Used to identify a button on the digital controller
[Square Brackets]	A parameter on the digital controller
<Inequality Symbols>	A message/fault code displayed on the digital controller

Where to find more Information

For further information please visit the BOSS Website at the following URL:


www.bssindustrial.co.uk

Alternatively, please contact the BSS technical team using the details below:

Phone: 0116 245 5940
Email: BOSStechnicalteam@bssgroup.com

Pressures In A Sealed System

Below is an overview of how the settings on a pressurisation unit must be considered for normal operation. Close, conflicting or overlapping settings will cause system instability and nuisance alarm conditions. If in any doubt please seek advice from a Sealed System professional.

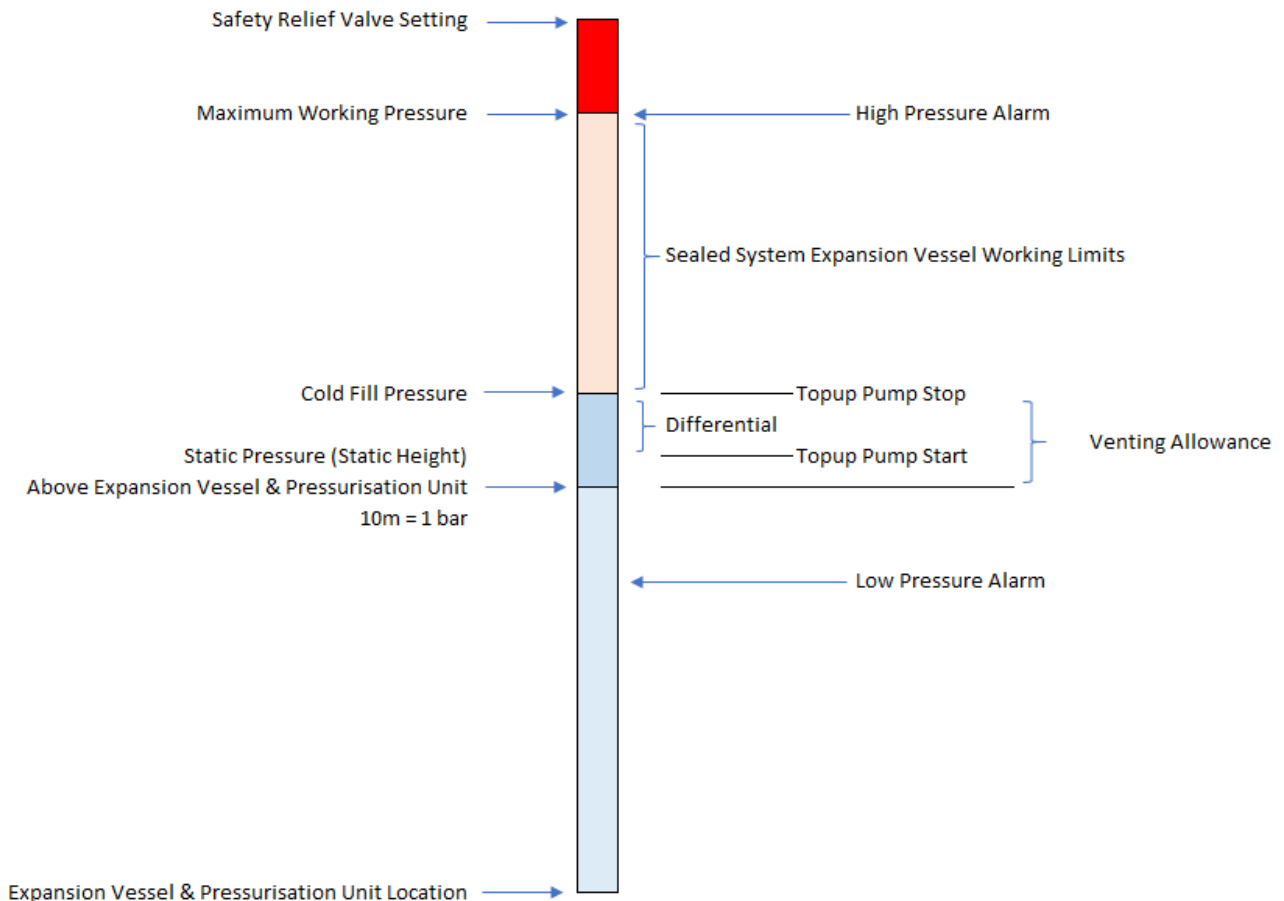

A typical venting allowance is 0.3 bar, added to the static height to give the cold fill pressure.

The Differential setting represents the allowable pressure loss before the pump activates and restores the cold fill pressure. The Differential setting must not be greater than the system venting allowance. This will ensure that the system remains fully flooded during normal topup conditions.

Equipment Overview


The function of this pressurisation unit is to provide a means of automated water top-up to sealed heating and cooling systems. The equipment is designed to provide periodic water top-up to compensate for minor losses in system pressure (e.g. slow leaks, air venting, etc.).



This equipment is not designed to cope with sudden losses of system pressure (e.g. manual draining) or major water losses (e.g. large leaks). The equipment is also not intended to be used for water boosting applications.

Principal of Operation

The following schematic shows the internal arrangement of a pressurisation unit:

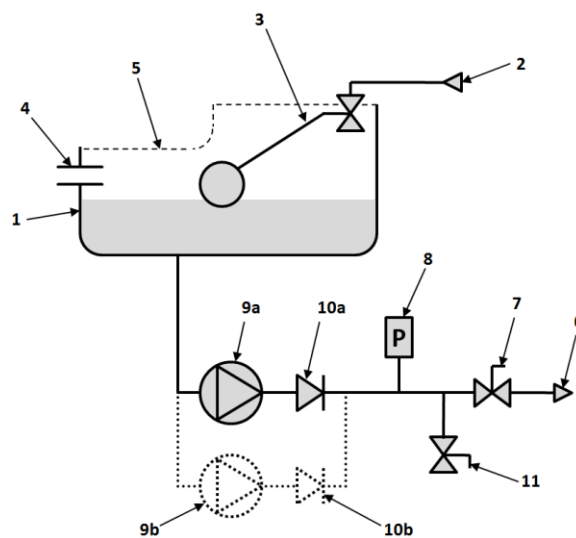

The pressurisation unit is fitted with a break tank (1) which is filled from the mains water supply (2) via a float operated valve (3). The break tank is fitted with an overflow (4) in case the break tank overfills, and a weir overflow (5) in case the primary overflow fails.

The pressurisation unit is connected into the heating system (6) via an isolation valve (7).

The pressure sensor (8) monitors the system pressure.

If the pressure sensor detects a drop in pressure, the pump (9a) will pump water from the break tank into the system. Once the required pressure has been reached, the pump will stop.

On twin pump models, a second pump (9b) is provided. The two pumps will run in a duty/standby configuration (i.e. the active pump will alternate with each pump start).

The pump(s) are fitted with non-return valves (10a, 10b) to prevent backflow.

A drain valve (11) is provided for draining down the unit and for commissioning purposes.

Installation



This pressurisation unit is not designed to be installed in an outdoor environment. The unit must be installed in a frost free environment, away from precipitation and water sprays/jets. If there is a risk of flooding, the unit must be installed on a raised plinth.



Please refer to the appropriate datasheet for the maximum working pressure and temperature of the pressurisation unit. The conditions at the point of connection to the system must not exceed these values.

Pipe Connections



To avoid damaging the float valve, the mains water supply pipe must be flushed before connection to the pressurisation unit.



All pipe connections must be made with appropriate jointing compound/PTFE tape. If PTFE tape is used, care must be taken to ensure that the tape does not obstruct the orifice of the fitting.




Non-return valves, pressure reducing valves and RPZ valves must not be installed between the pressurisation unit and the heating/cooling system. These devices will prevent the pressure sensor from reading the system pressure.



The pressurisation unit and expansion vessel should be connected to the system at the same point, to provide a neutral pressure reading. This point of connection should be in the system return, on the suction side of the circulation pump.

Typical Installation Diagram

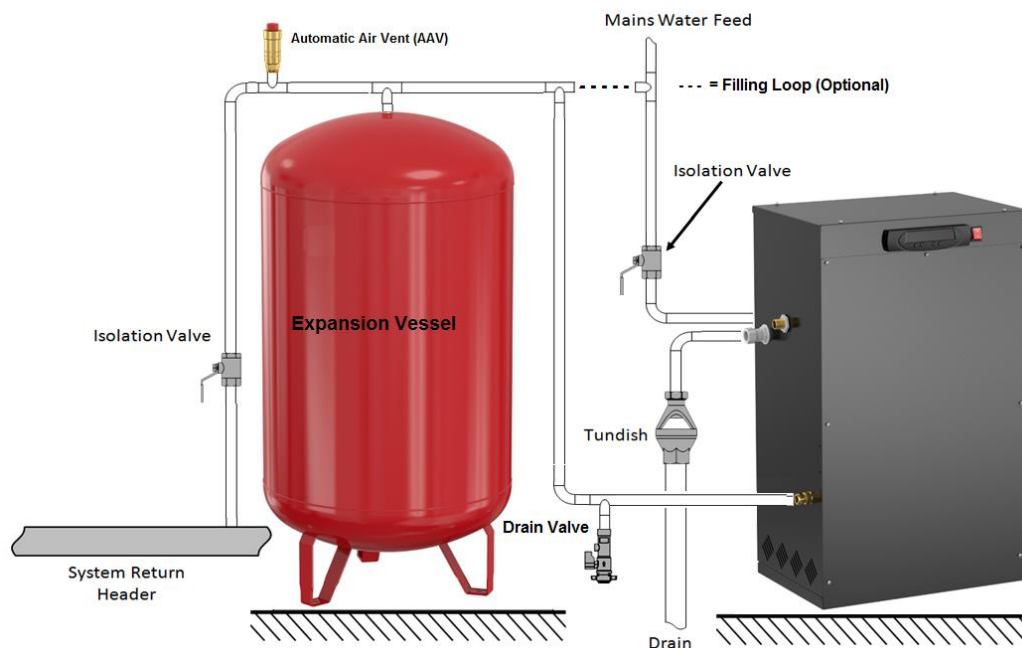

Flow Restrictors (Mini & Midi Models Only)




Pressurisation equipment fitted with a plastic, side-entry torbeck valve must be fitted with a filter and – depending on the mains water pressure – a flow restrictor. Failure to do this may result in damage to the equipment.


Two different flow restrictors are supplied with the equipment, both of which include an integral filter. The selection of the appropriate flow restrictor is based on the maximum mains water pressure at the point of installation. Please refer to the following table for selection.

Mains Water Pressure	Requirement
Below 1 Bar	No Restrictor. Install Filter Only
1 – 4 Bar	Low Pressure Restrictor (coloured)
Above 4 Bar	High Pressure Restrictor (white)



If no restrictor is required, the filter must be removed from one of the restrictors and installed on its own. The following diagram shows how to remove the filter:

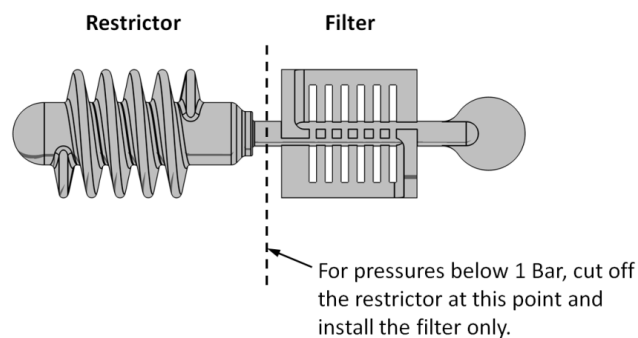

To install the flow restrictor/filter, hold it by the tab and push it into the opening of the float valve connection, as shown in the diagram below:



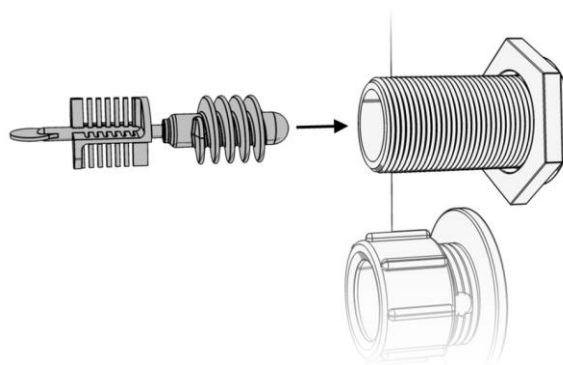


AX Skid Clearance and Connection Requirements

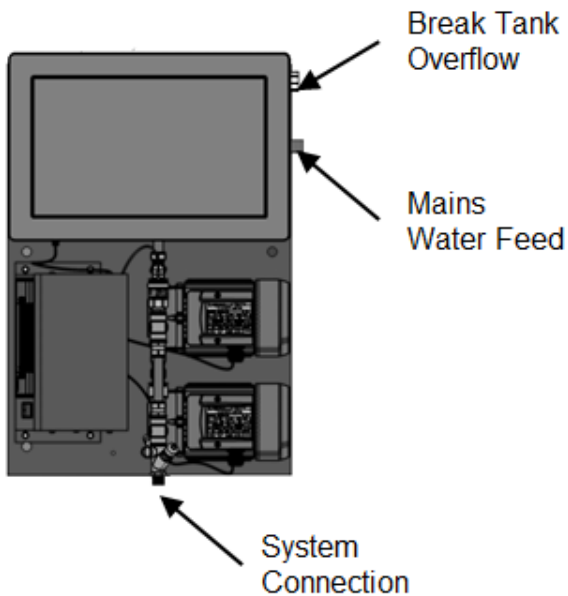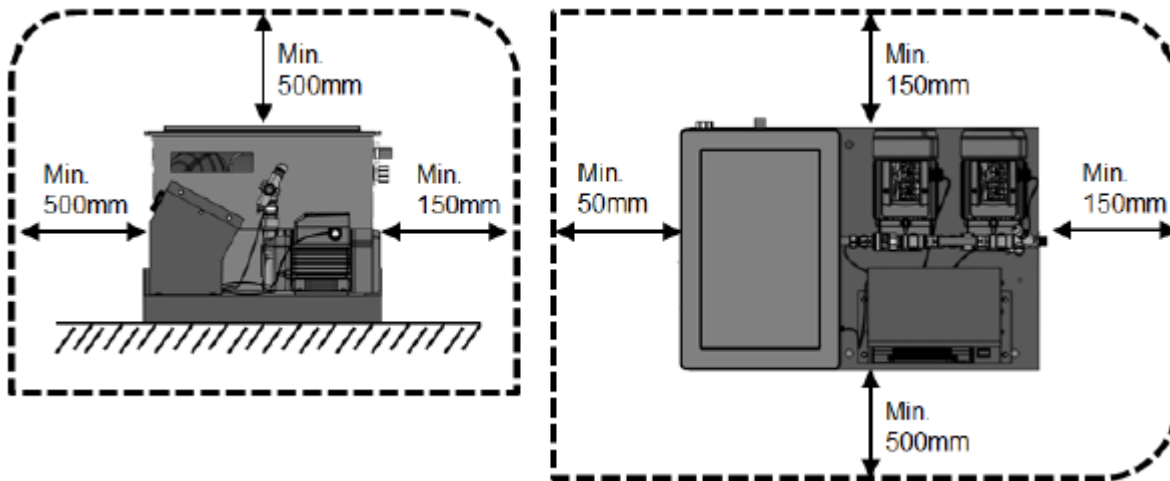




Connection	Size	Notes
Mains Water Feed	½" BSP M	An isolation valve must be installed on the mains water feed for servicing.
Break Tank Overflow	22mm	Guidance on drainage requirements should be obtained from the local water authority.
System Connection	½" BSP M / 15mm	<p>The pressurisation unit and expansion vessel should be connected to the system at the same point.</p> <p>The point of connection should be in the system return, on the suction side of the circulation pump.</p> <p>Non-return valves, pressure reducing valves and RPZ valves must not be used.</p>

PF Clearance and Connection Requirements

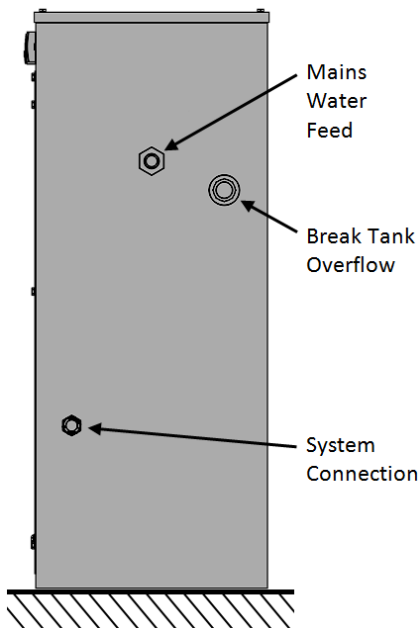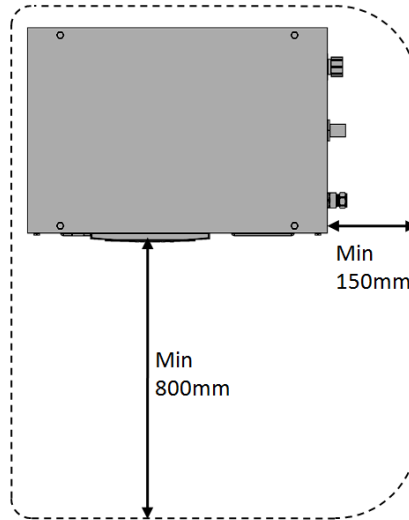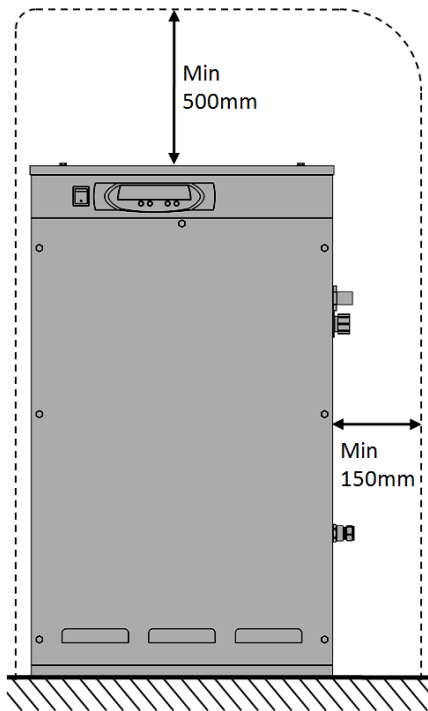




Connection	Size	Notes
Mains Water Feed	½" BSP M	An isolation valve must be installed on the mains water feed for servicing.
Break Tank Overflow	22mm	Guidance on drainage requirements should be obtained from the local water authority.
System Connection	½" BSP M / 15mm	<p>The pressurisation unit and expansion vessel should be connected to the system at the same point.</p> <p>The point of connection should be in the system return, on the suction side of the circulation pump.</p> <p>Non-return valves, pressure reducing valves and RPZ valves must not be used.</p>

Midi (MD) Clearance and Connection Requirements

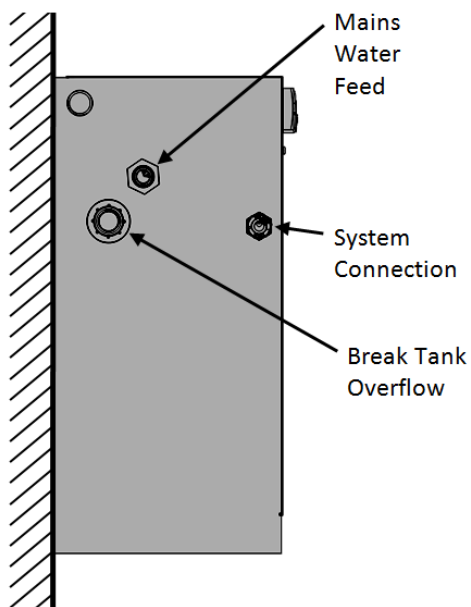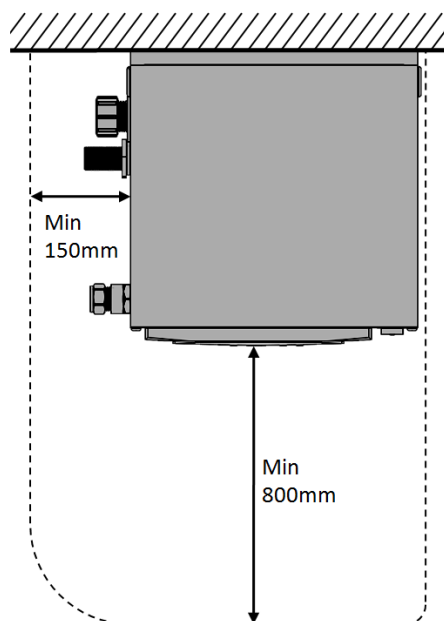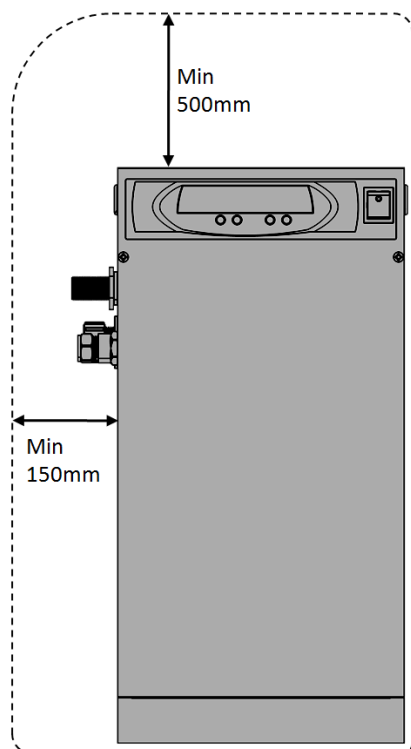

Connection	Size	Notes
Mains Water Feed	½" BSP M	An isolation valve must be installed on the mains water feed for servicing.
Break Tank Overflow	22mm	Guidance on drainage requirements should be obtained from the local water authority.
System Connection	½" BSP M / 15mm	<p>The pressurisation unit and expansion vessel should be connected to the system at the same point.</p> <p>The point of connection should be in the system return, on the suction side of the circulation pump.</p> <p>Non-return valves, pressure reducing valves and RPZ valves must not be used.</p>

Mini (MX) Clearance and Connection Requirements

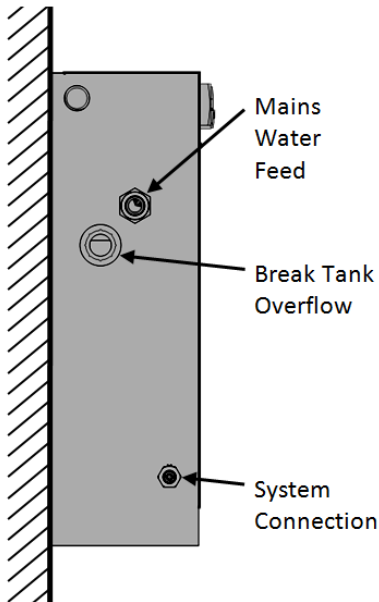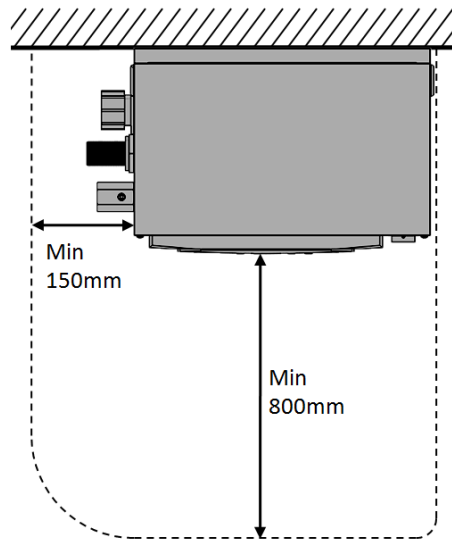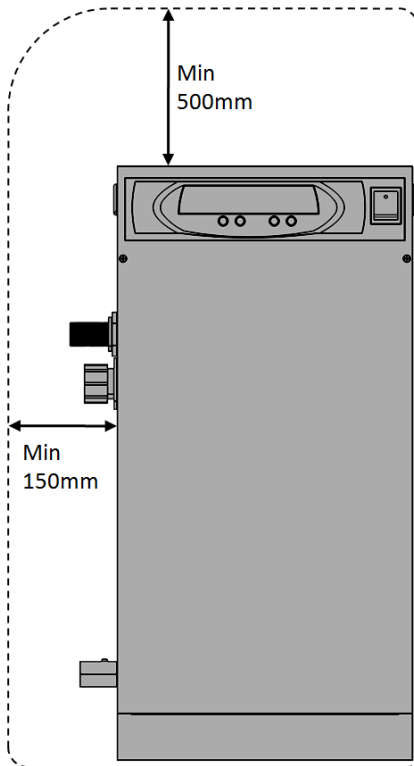

Connection	Size	Notes
Mains Water Feed	½" BSP M	An isolation valve must be installed on the mains water feed for servicing.
Break Tank Overflow	22mm	Guidance on drainage requirements should be obtained from the local water authority.
System Connection	¼" BSP F	<p>The pressurisation unit and expansion vessel should be connected to the system at the same point.</p> <p>The point of connection should be in the system return, on the suction side of the circulation pump.</p> <p>Non-return valves, pressure reducing valves and RPZ valves must not be used.</p>

Electrical Power Supply




This equipment must be electrically isolated before removing the covers. Cables connected to the volt free contacts may be supplied from another source and may remain live after the unit is isolated. These must be isolated elsewhere.




All electrical connections must be carried out by a suitably qualified and competent person.

The mains power supply to the pressurisation unit must be connected into the fused terminal block as shown below:

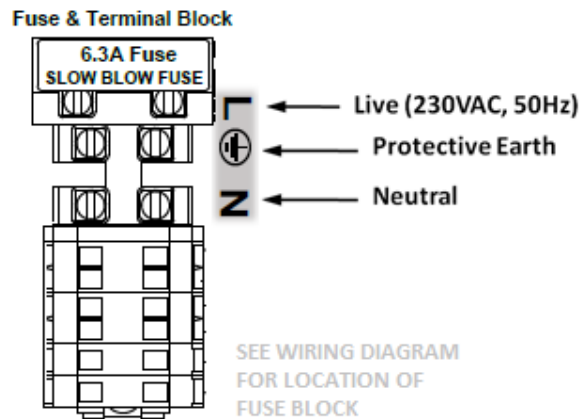

On some larger models, the fused terminal block is replaced by a fused spur. If this is the case, the power supply must be connected into the fused spur, as shown below:

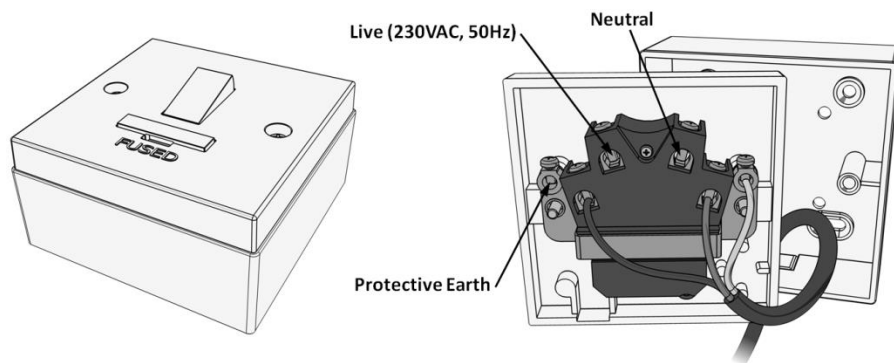

It is recommended to supply power to the pressurisation unit via a lockable isolator. This should be installed within 2m of the equipment.




This equipment can be damaged by the high voltages produced by electrical installation testing equipment. When performing electrical installation tests, the equipment must be isolated from the supply.

Micro Controller

Fault contacts

There are 6 volt free fault contacts which can be used for connection to a BMS system, or as a boiler interlock. These are terminals 1-12, located on the digital controller:

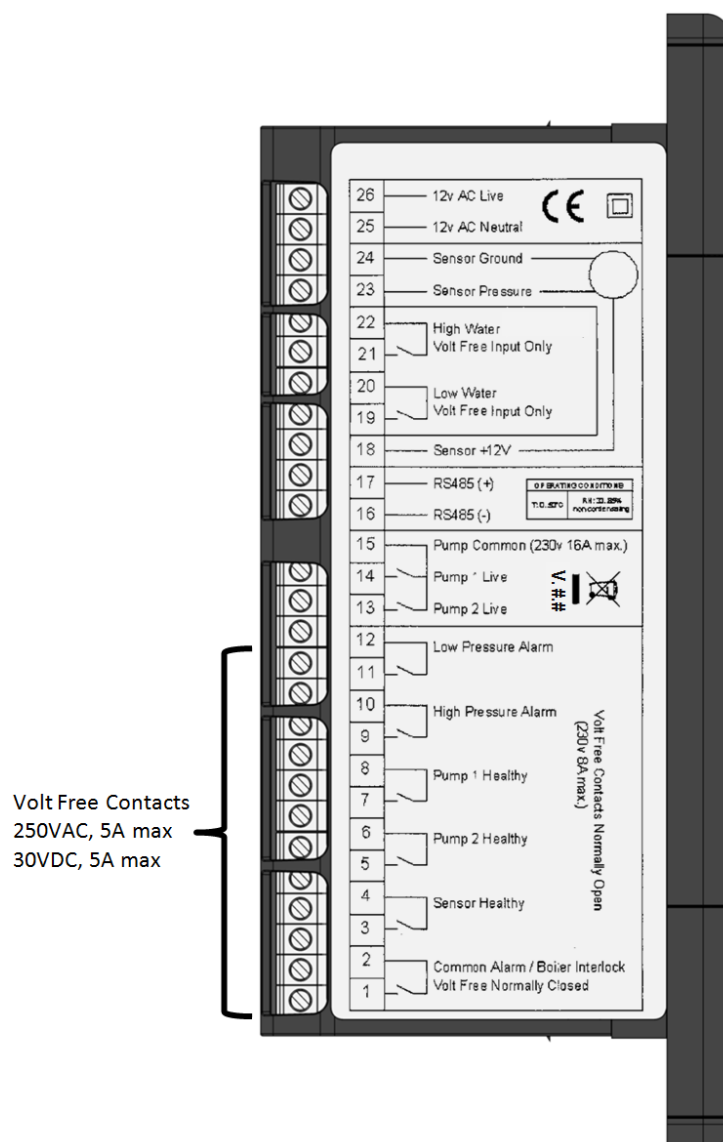

With the exception of the Common Alarm, it is possible to convert all other fault contacts to normally closed. For further information please refer to the commissioning section of this manual.

Commissioning



It is highly recommended to have this equipment commissioned by a BOSS approved engineer. Any damage or loss incurred through incorrect commissioning by an unapproved engineer will not be covered by the warranty.

Pre-Commissioning Checklist



The following conditions must be met before starting the commissioning process. Failure to meet these conditions may result in injury or damage to the equipment, system and property.

☐

Equipment is sited in a frost free area, away from precipitation and water sprays/jets

☐

All necessary pipe/electrical connections have been made to a satisfactory standard

☐

The temperature and pressure at the point of connection are within the operating limits of the pressurisation unit.

☐

The heating/cooling system is fitted with a safety valve and expansion vessel



The following conditions must be met for the pressurisation unit and heating/cooling system to function correctly. If these conditions have not been met, it is not advisable to proceed with the commissioning process.

☐

The system connection has been made into the system return header/pump suction

☐

There are no non-return valves, pressure reducing valves or RPZ valves installed between the pressurisation unit and the heating/cooling system

☐

The expansion vessel is pre-charged to the correct pressure (equal to fill pressure)



It is advisable to fill the heating/cooling system prior to commissioning. If this is not possible, the pressurisation unit can be used to fill the system after commissioning. Depending on the size of the system, this may take a considerable amount of time.

☐

The heating/cooling system is filled and pressurised to the required cold fill pressure, with the water at ambient temperature (approximately).

Controller Overview

The following image shows the front of the pressurisation unit digital controller. 4 buttons are provided for programming, and an LED display which shows scrolling messages.



When the controller is first powered up, it will display the controller version number. This manual relates to controller version >8.0. If the controller is of a different version, there may be differences in the menu items available.

When in normal operation, the controller will display the current system pressure. If a fault occurs, the controller will display a fault code and produce an audible alarm.

In normal operation, the functions of the buttons are as follows:

Button	Function	
	Press	Hold
SET	-	Show Current System Pressure
MUTE	Mute Audible Alarm	Reset Unit
+	-	Enter Programming Menu
-	-	Enter Programming Menu

Controller Programming



Do not alter any settings without first understanding the implications of doing so. Incorrect settings may cause damage to the equipment, system or property.

To enter the programming menu, hold the (+) button until “enter code” appears on the screen, followed by “0000” with a flashing cursor after the first digit.

To gain access to the programming menu, one of the following codes must be entered:

Customer Code	Standard set of options	2601
Engineer Code (≥V6.3)	Extended set of options	4706

To enter the code, change the first digit with the (+) and (-) buttons, then press (SET) to move onto the next digit. Repeat for all digits, then once the correct code is shown on the display, press (SET) to enter the programming menu.

Once a correct code has been entered, the first option [COLD FILL] will appear on the screen.

Once in the menu, the value of the current menu item can be changed using the (+) and (-) buttons. Once the current value has been set, pressing the (SET) button will move on to the next option.



It is not possible to navigate backwards through the menu. To return to a previous setting in the menu, press the (SET) button repeatedly to scroll through to the end of the menu, and then re-enter the appropriate code.



If the controller loses power while in the programming menu, all changes made will be erased. To confirm all changes, the end of the menu must be reached, and the “SAVING...” message must be displayed.

Program List

The table below gives details of all menu items, in the order that they will appear:

#	Menu Item	Function	Default Value
1	COLD FILL	<p>The required fill pressure, i.e. pump 'cut-out' pressure.</p> <p>The recommended setting is 0.3 BAR above the static pressure of the system (0.1 Bar per meter of static height).</p> <p>For example, a 14m high installation will have a static pressure of 1.4 Bar, making the recommended cold fill pressure 1.7 Bar.</p> <p>It is not possible to enter a value higher than the current [HIGH SET] or lower than the current [LOW SET] values.</p>	1.0 Bar
2	HIGH SET	<p>The high pressure alarm setting.</p> <p>If the pressure in the system reaches this value, the <HIGH PRESSURE> alarm and common alarm will be activated.</p> <p>The recommended setting is 10% below the safety valve rating.</p> <p>For example, if the safety valve rating is 3 Bar, the recommended setting is 2.7 Bar.</p> <p>It is not possible to enter a value lower than the current [COLD FILL] value.</p>	2.7 Bar
3	LOW SET	<p>The low pressure alarm setting.</p> <p>If the pressure in the system falls below this value, the <LOW PRESSURE> alarm and common alarm will be activated, and the pressurisation pumps will not run.</p> <p>The recommended setting is 0.5 Bar below the [COLD FILL] pressure.</p> <p>It is not possible to enter a value higher than the current [COLD FILL] value.</p>	0.5 Bar
4	DIFFERENTIAL	<p>The differential between the 'cut-in' and 'cut-out' pressures of the pressurisation pumps.</p> <p>The cut-in pressure will be equal to the [COLD FILL] pressure, minus the differential pressure.</p> <p>For example, if the [COLD FILL] pressure is set to 1.5 bar, and the differential set to 0.2 Bar, the pump 'cut-in' pressure will be 1.3 Bar ($1.5 - 0.2 = 1.3$)</p>	0.2 Bar
5	FLOOD LIMIT	<p>The maximum continuous run time for each of the pressurisation pumps.</p> <p>If a pump runs continuously for longer than this period, the pump will stop and a <FLOOD LIMIT> alarm will be activated.</p> <p>This is to prevent the unit from pumping large amounts of water in the event of a large leak/burst pipe.</p> <p>For very large systems, this may need to be increased.</p> <p>The value can be changed in increments of 10 minutes, to a maximum of 990.</p>	10 MINS
6	PUMP 1 COUNT	<p>The cumulative number of pump starts for pump 1.</p> <p>This is a cumulative counter, the value of which cannot be modified. If using the engineer's code, the counter can be reset to zero by holding the (MUTE) button.</p>	-
7	PUMP 1 HOURS	<p>The cumulative run time in hours for pump 1.</p> <p>This is a cumulative timer, the value of which cannot be modified. If using the engineer's code, the counter can be reset to zero by holding the (MUTE) button.</p>	-

#	Menu Item	Function	Default Value
8	PUMP 2 COUNT	The cumulative number of pump starts for pump 2. This is a cumulative counter, the value of which cannot be modified. If using the engineer's code, the counter can be reset to zero by holding the (MUTE) button.	-
9	PUMP 2 HOURS	The cumulative run time in hours for pump 2. This is a cumulative timer, the value of which cannot be modified. If using the engineer's code, the counter can be reset to zero by holding the (MUTE) button.	-
10	ALARM COUNT	The cumulative number of all alarm incidents. This is a cumulative counter, the value of which cannot be modified. If using the engineer's code, the counter can be reset to zero by holding the (MUTE) button.	-
11	POWER INTERRUPTED	The cumulative number of power interruptions (i.e. controller turned off/ power cut). This is a cumulative counter, the value of which cannot be modified. If using the engineer's code, the counter can be reset to zero by holding the (MUTE) button.	-
12	PULSE	When enabled, if a pump has been inactive for 60 days, it will start and run for 2 seconds. This is to prevent the pumps from seizing.	YES
13	EXCESSIVE START	When enabled, if there are more than 3 individual pump runs within an 8 hour period, the unit will register an <EXCESSIVE DEMAND> alarm. Enabling this option may cause false alarms on some systems.	NO
14	SERVICE	When enabled, a service reminder will be displayed after 12 months from when the option was enabled. To reset the service reminder, set the value to 'NO' and exit the menu. Then, re-enter the menu and set the value to 'YES' again.	NO
15	FILL SYSTEM	When enabled, the <LOW PRESSURE> and <FLOOD LIMIT> alarms will be disabled, and pump 1 will run continuously for up to 24 hours until the cold fill pressure has been reached. Once the cold fill pressure has been reached, this option will automatically be deactivated, and the low pressure alarm and flood limit will be reactivated. This function is used to fill a system that is empty or at low pressure. Care must be taken using this option as the flood limit alarm is disabled, increasing the risk of flooding. This option cannot be enabled on Mini pressurisation units.	NO



If using the customer code, the menu will end at this point. After pressing (SET) once more, the controller will display "SAVING..." and return to normal operating mode. If using the engineer's code, additional menu items will be displayed.



The following settings are all pre-programmed in the factory and should not need to be modified on site. If these settings appear to have been reset, the most likely cause is a power spike. If this problem persists, a power filter may be required.



The following settings are for experienced engineers only. Incorrect configuration of these settings can cause the equipment not to function correctly, and may cause damage to the equipment, system or property.

#	Menu Item	Function	Default Value
16	PUMPS NUMBER	The number of pumps installed in the pressurisation unit. This can be set to either 1 or 2.	2
17	PUMP TYPE	The type of pump installed in the pressurisation unit. There are two options, which are as follows: 0 – Centrifugal Pump (Flexfiller /Digifiller/ Midi) 1 – Piston Pump (mini units only)	1
18	PUMP SENSE	Disabling this option will stop the controller from monitoring the pumps and generating <PUMP FAIL> faults. It is not recommended to disable this option. Please consult BOSS Technical before doing so.	YES
19	SENSOR TYPE	The type of pressure sensor installed in the unit. There are two options which are as follows: 1 – 1-6V Output, 0-10 Bar Range 2 – 1-6V Output, 0-16 Bar Range	1
20	SPC CONTROLLER	Not required on standard Pressurisation unit	NO
21	ADDITIVE	Not required on standard Pressurisation unit	NO
22	ID NUMBER	A user configurable identification number. This option does not serve any functional purpose.	01
23	RELAY INVERSION	When enabled, all normally open fault contacts (i.e. all except the common alarm) are converted to normally closed.	NO
24	OVERRUN	Allows the pump to continue running for a set period of time after the required pressure has been reached. This will prevent the pumps from 'hunting'. The value can be set from 0 – 10 seconds.	5
25	PRESSURE ALARM AUTO RESET	When enabled, the <HIGH PRESSURE> and <LOW PRESSURE> alarms will be cleared automatically if and when the pressure returns to normal. If disabled, the alarms must be manually reset.	YES
26	CASCADE	Allows the pumps to operate in duty/assist mode. After either pump starts, the other pump will start after a set period of time. This option can be set to OFF, or 5 – 30 seconds.	OFF
27	BOOST	When enabled, the controller will allowing the pumps to run even if the system pressure is zero.	YES
28	SOLENOID CONTROLLER	Not required on standard Pressurisation unit	NO


Note:

21 = GLYCOL UNIT / 28 = FLOMAT ON (>7.3 VERSION CONTROLLER)

Hydraulic Commissioning

1 – Float Valve Setting

Ensure that the break tank float valve is set to its lowest position:

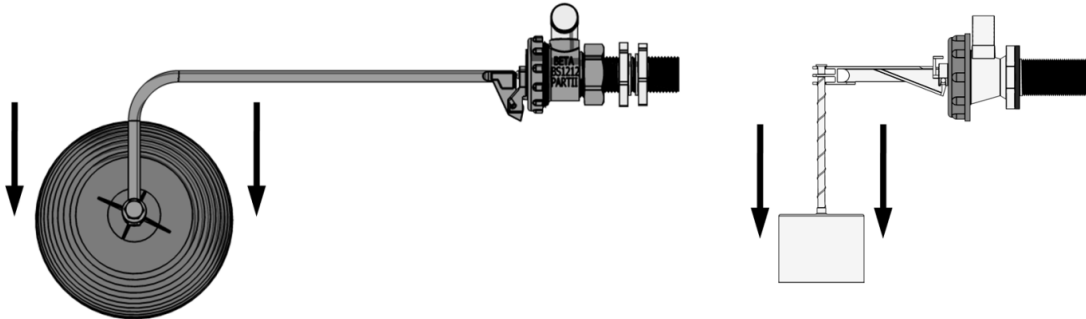

PF & AX Skid Units

MX & MD Units

If a drain valve is fitted to the break tank, ensure that it is closed. Then, turn on the mains water supply and allow the break tank to fill.




When the float valve operates for the first time, it may not close immediately, causing the break tank to overfill. Once the internals of the valve have been fully wetted this should not occur again.


2 – Bleeding Pumps

This step is only necessary for Flexfiller and Midi units. For Mini units, move on to the next step.



Make sure that the internal isolation valve within the pressurisation unit is closed by following the steps below. Failure to do this may cause injury or damage to the equipment, system or property.

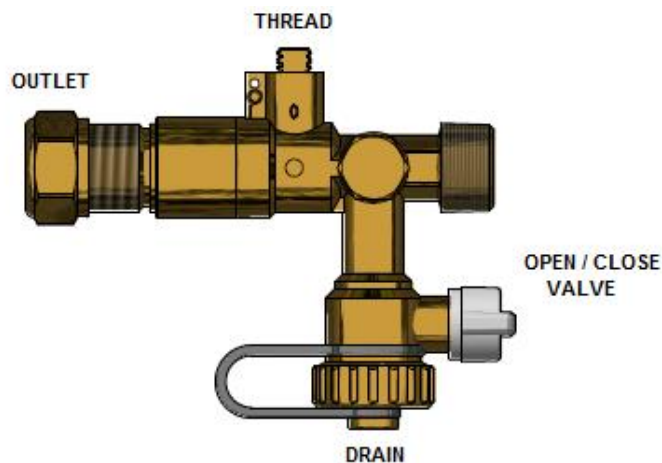


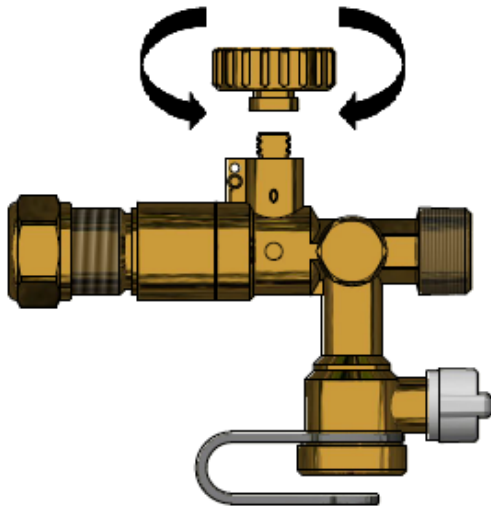


Procedure:

1. Unscrew cap from the drain valve
2. Place cap on thread
3. Twist cap clockwise to close valve from system
4. Place a hose over the drain connection
5. Open the valve to drain
6. Close the drain valve
7. Take off hose from drain valve
- 6 Twist cap anti-clockwise to open valve to system
7. Place cap back on the drain connection

Locate the bleed screw on the pump. The following diagrams show examples of typical bleed screw locations for most pumps:

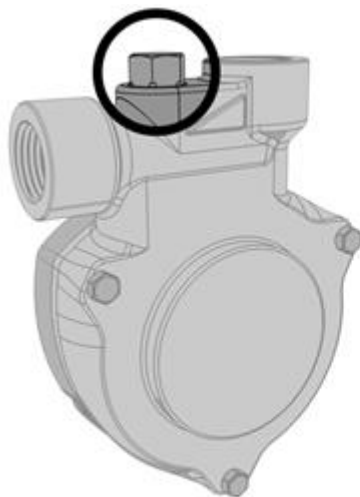

BOSS PR11 / BOSS PR13

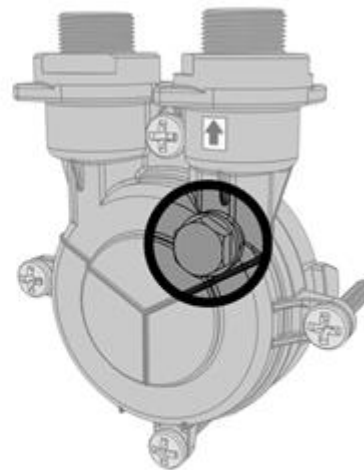


Flamco-003



Do not use excessive force when tightening the bleed screw as this may damage the pump casing.



If the pump has a plastic bleed screw like the one shown below, do not use excessive force or attempt to use any tools to turn it as this may damage the pump casing.

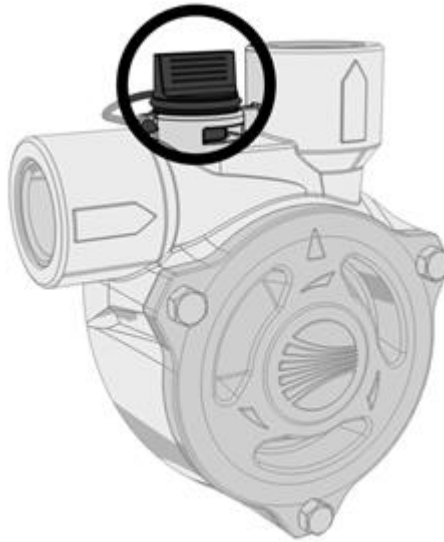

Pedrollo PQAm 90

Forcing Pumps to Run



Turn on the power supply to the digital controller and wait for the system pressure to appear on the display. Then, enter the code 2601 and go to the first setting in the menu, cold fill. While at this point in the menu, holding down the (MUTE) button will force pump 1 to run, and holding down the (SET) button will force pump 2 to run.



If the controller is older than V6.1 then there is no way to force pump 2 to run via the controller. To force the second pump to run, the unit must be isolated and the live wires in terminals 13 and 14 must be swapped over. The second pump then becomes “pump 1” and can be forced to run via the controller.



To bleed the pumps, the pumps must be started. Then while the pump is running, the bleed screw must be opened until all the air has been removed and only water is being discharged. The bleed screw can then be closed.





Failure to bleed the pumps may result in damage to the equipment, system and property.



After bleeding the pumps, close the drain valve and remove the hose from the hose tail.

3 – Initial Start-up

Open the internal isolation valve within the pressurisation unit by following the steps below:

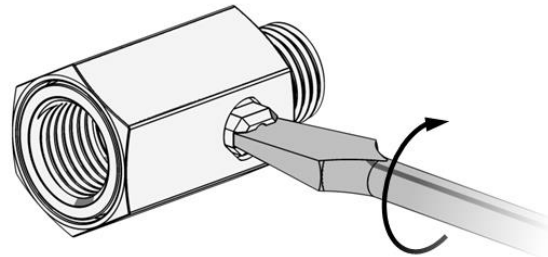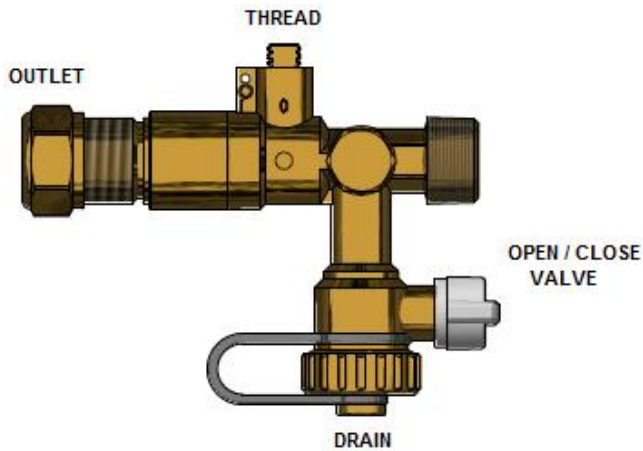

PF, MD & AX Skid Units

MX Units

Once the isolation valve is open, the pressure sensor will be able to read the system pressure.

Turn on the power supply to the pressurisation unit. Depending on the current system pressure, the unit will respond in one of the following ways:



If the system pressure is below the low-pressure alarm setting, the controller will display a “LOW PRESSURE” fault and the pumps will not run. To clear this fault, either increase the system pressure using a filling loop, or enable the system fill option on the pressurisation unit.



If the system pressure is above the high-pressure alarm setting, the controller will display a “HIGH PRESSURE” fault. To clear this fault, use a suitable drain point to remove water from the system until the system pressure equals the cold fill pressure.



If the system pressure is above the low-pressure alarm setting, but below the cold fill setting (by an amount equal to the differential setting), the pumps will start. Once the system pressure has reached the cold fill pressure, the pump will stop.

Once the required system pressure has been reached, the controller will display the current system pressure. The unit is now in normal operation.

4 – Testing

To test the operation of the pressurisation unit while connected to the system, the system pressure must be lowered slowly to simulate a minor leak.

This can be achieved by using a drain point on the system, the drain points on the pressurisation unit, or by manually opening the safety relief valve.



Care must be taken not to let the pressure drop too quickly. If the system pressure falls below the low pressure set point, a low-pressure fault will be displayed and the pumps will not run. The pressurisation unit is not designed to cope with a sudden loss of system pressure, which would be symptomatic of a catastrophic failure such as a burst pipe.

Once the system pressure has fallen below the cold fill setting (by an amount equal to the differential setting), the pump should start refilling the system. The pump will continue to run until the cold fill pressure has been reached.

This test demonstrates the primary function of the pressurisation unit. This test may be repeated at any time to confirm the operation of the pressurisation unit.

Operation

Once commissioned, the pressurisation unit should operate without any user intervention.

Under normal operating conditions, the display will show the current system pressure in Bar.

While the unit is filling, the display will show <PUMP 1 RUN> or <PUMP 2 RUN> depending on which pump is currently running.

If the unit identifies a fault, the display will show the relevant fault code.



If the pressurisation unit is showing a fault code on the display, holding down the [SET] button will cause the current system pressure to be temporarily shown on the display.

Fault Codes

The following table gives the meanings of all fault codes used on the digital controller:

Fault Code	Description	Auto/Manual Reset
LOW PRESSURE	The system pressure is below the [LOW PRESSURE] set point.	User Defined
HIGH PRESSURE	The system pressure is above the [HIGH PRESSURE] set point.	User Defined
LOW H2O	The break-tank low level float switch has been activated	Auto Reset
HIGH H2O	The break-tank high level float switch has been activated	Auto Reset
P1 FAIL	The controller has detected a fault (incorrect current draw) on the respective pump	Manual Reset
P2 FAIL		
P1 FLOOD LIMIT	The respective pump has run for longer than the [FLOOD LIMIT] period	Manual Reset
P2 FLOOD LIMIT		
ERR. 1	The signal from the pressure sensor is out of range	Manual Reset
EXCESSIVE DEMAND	There have been 4 pump starts within an 8 hour period	Manual Reset
SERVICE	The pressurisation unit is due an annual service	Manual Reset



For practical guidance on diagnosing and rectifying faults, please refer to the Troubleshooting section of this manual.

Shutdown procedure



The pressurisation unit must be shut-down during any of the following scenarios:

- Work is being carried out on the system.
- Work is being carried out on the pressurisation unit
- The heating/cooling system is being flushed

To shut down the pressurisation unit, please follow the steps below:

1. Isolate the electrical power supply to the pressurisation unit
2. Isolate the mains water supply to the pressurisation unit
3. Isolate the pressurisation unit from the system using the internal isolation valve
4. If it is anticipated that the unit will be out of commission for more than 24 hours, it is advisable to drain the water from the break tank.

Start-up Procedure



Attention – This procedure is for restarting the unit after being shutdown (as described above). For initial start-up and commissioning procedures, please refer to the Commissioning section of this manual.

To restart the pressurisation unit, please follow the steps below:

1. Perform a visual inspection of the unit and installation to check for signs of damage
2. Check the break-tank for debris/deposits and remove if necessary
3. Turn on the mains water supply to the pressurisation unit and allow the break tank to fill
4. Open the internal isolation valve
5. Turn on the mains power supply and wait for the controller to start
6. Depending on the conditions in the system, the unit may display one or more fault codes at this point. If this happens, please refer to the Troubleshooting section of this manual for guidance.

Maintenance

Due to variations in operating conditions, and the varying loads placed on pressurisation units, it is not feasible to provide accurate predictions of component lifespan. The most effective method of maintenance is to inspect the pressurisation unit for early signs of component failure and take action accordingly.

The following maintenance procedures should be performed at least once a year:

Visual Inspection

A basic visual inspection will highlight the majority of potential faults on a pressurisation unit. It is recommended to perform a visual inspection annually. However, due to the simplicity of performing these checks, frequent inspections are encouraged.

- Check the digital display for fault codes
- Check for signs of leakage (e.g. water, mineral deposits, corroded components/cabinet)
- Check the break tank overflow for signs of water discharge
- Check flexible hoses for signs of degradation (e.g. cracks)
- Check that the pressure reading on the digital display corresponds to the actual system pressure (read off another gauge)

Interrogate Controller

The digital controller keeps a log of the number of pump starts and total hours run for each pump, as well as the number of alarm activations and power interruptions. It is advisable to take a note of these figures when servicing the unit, as they may be helpful in diagnosing potential issues. Fields are provided in the service log for these figures.

It is advisable to scroll through all the settings (including engineers setting) and check them against the figures on the commissioning report. If there are any discrepancies, check first with on-site staff to see if the changes are deliberate. If not, reconfigure appropriately.



If settings are persistently becoming corrupted, a power filter may be required. Please refer to the Installation section of this manual for more information.

Test Unit Operation

The best way to test the operation of the pressurisation unit is to drain water from the system, allowing the pressure to drop slowly. Once the pressure falls below the pump cut-in pressure ([COLD FILL] – [DIFFERENTIAL]) the pump should start. As soon as the pump starts, close the drain point and allow the system pressure to rise. Once the [COLD FILL] pressure is reached, the pump should stop.

If the unit is a twin pump model, this test should be repeated until both pumps have run and successfully re-pressurised the system.

Check Float Valve Operation

To test the operation of the break tank float valve, first ensure that the break tank overflow has a suitable path to drain.

Gently push down on the arm of the float valve until it starts to discharge water, then release the float valve arm. Once the arm has been released, the flow of water should stop within a few seconds.

Check Float Switch Operation

To test the operation of the break tank low level float switch, reach into the break tank and gently push the float switch down into the horizontal position.

The digital controller should now display a <LOW H2O> fault.

Release the float switch and observe the display. The fault should clear after a delay of a few seconds.

Check Break Tank Water Condition

Perform a visual check of the water in the break tank. If there is any dirt or debris in the water, or deposits on the sides of the tank, the tank should be drained down and cleaned.

Check Strainer (Flexfiller units only)

Flexfiller pressurisation units are fitted with a mesh strainer in the connection at the bottom of the break tank. This should be removed and inspected. Depending on the condition, this part may need to be cleaned or replaced.

Check Expansion Vessel Pre-Charge

Many of the problems experienced with pressurisation equipment can be traced back to the expansion vessel.

The expansion vessel pre-charge pressure must be checked after 2 years and annually thereafter.


To perform this test, the expansion vessel must first be drained of water, then a gauge can be connected to the Schrader valve on the vessel to measure the pre-charge pressure. The pre-charge should be equal to the [COLD FILL] pressure setting.

The pressure can be increased using a foot pump, air compressor or pressurised air/nitrogen cylinder.



If any faults are identified during these checks, please refer to the Troubleshooting section of this manual. If replacement parts are required, please refer to the Spares section for part codes.


Wiring diagram

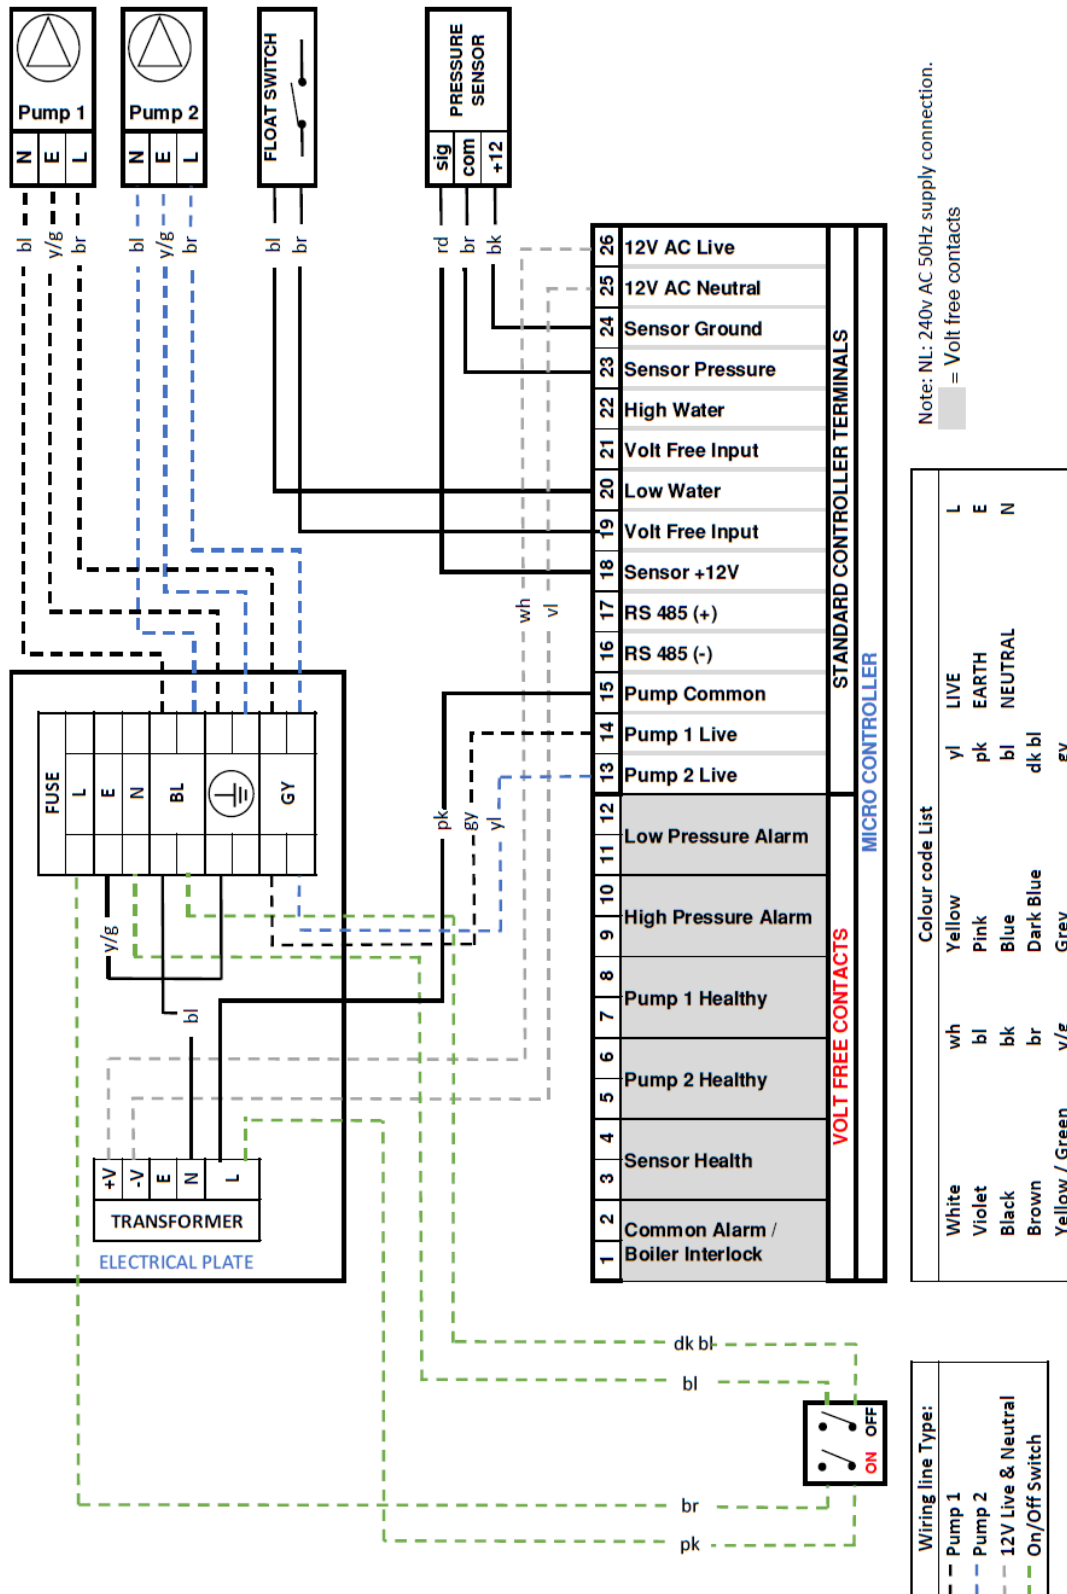

Spare Parts



The drawings on the following pages show the internal components for a range of pressurisation equipment. Due to continuing development and minor design changes, some components may be changed without notice. Therefore, the drawings may not accurately reflect the current production design. If in any doubt about the compatibility of replacement parts, please contact BOSS.

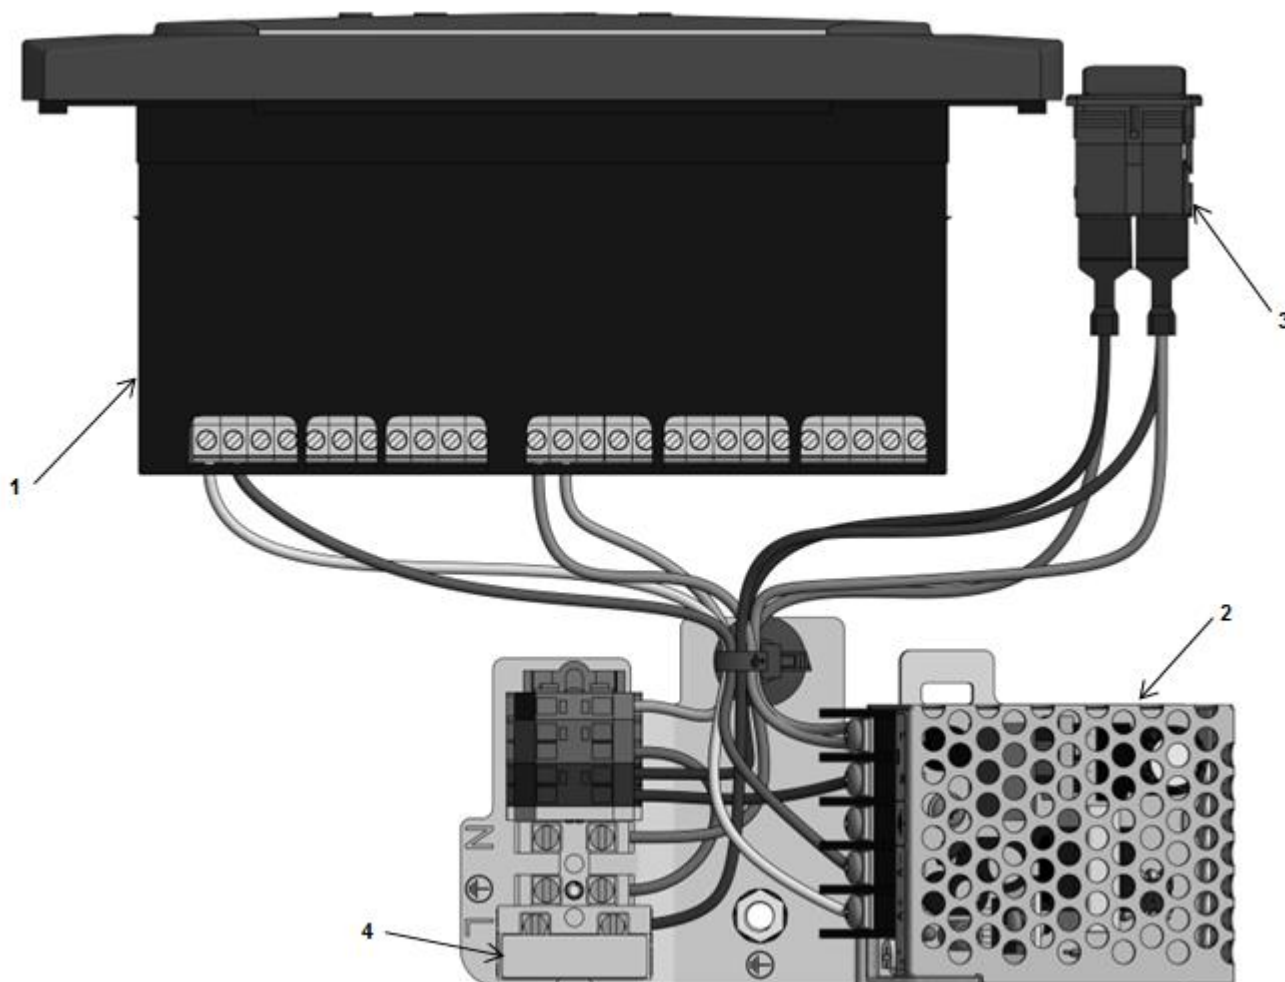


*Image for indication only

Kit No	Kit Description	ID	Part Description	Qty
STA12501	Controller Std Pressurisation Unit	1	CONTROLLER	1

STA12500	Power Supply and Switch	3	ON/OFF SWITCH	1
		2	ELECTRICAL PLATE TWO PUMP	1

ID Number (4) is included with part of Electrical plate as standard, this rated at 6.3 Amp. (125D/225D) 10.0 Amp

AX Models (1-2.5E, 2-2.5E, 1-5E, 2-5E)

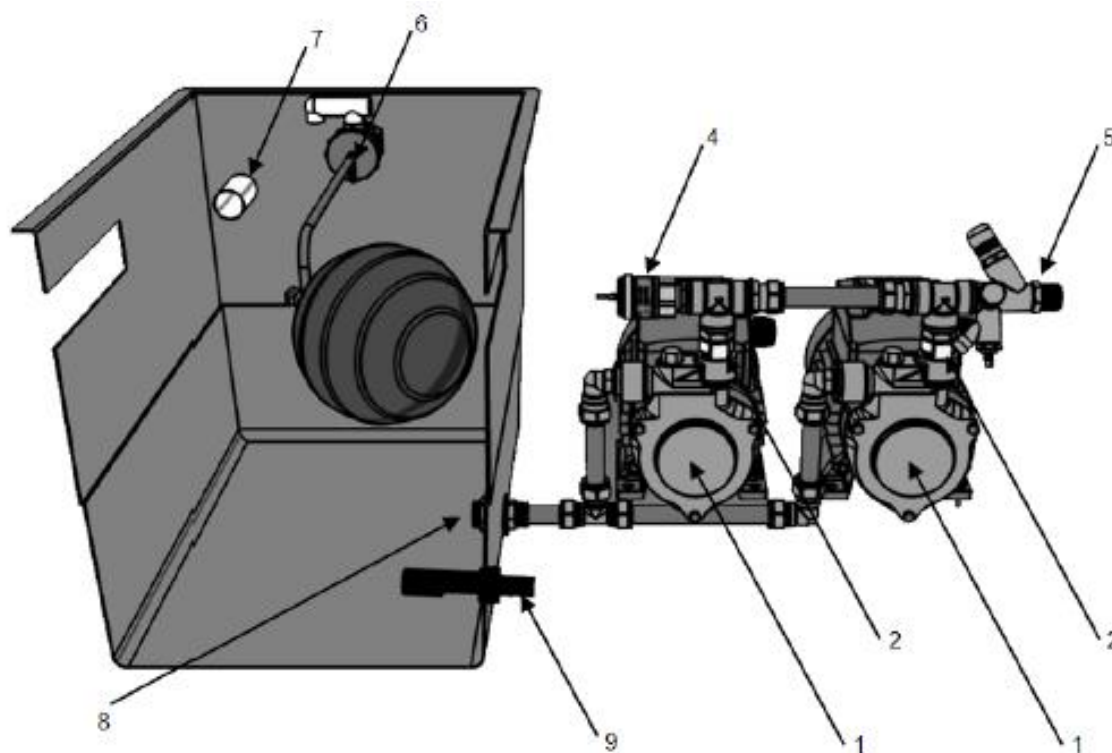


*Image for indication only

#	Description	Part Code
1	Pump – Model MD1-2.5E & MD2-2.5E (PR13)	BSS BOSS PR13
	Pump – Model MD1-5E & MD2-5E (PR11)	BSS BOSS PR11
2	½" Non-Return Valve	FC SC1
4	Pressure Transducer (0-10 Bar, 1-6V)	1-6V TRANSDUCER
5	Combined Isolation & Drain Valve	27940
6	Float Valve	BSS P33
7	Overflow Connection	BSS M021
8	Mesh Strainer	N/A
9	Float Switch	EL-TK-FSW-L90

PF Models (1-2.5E, 2-2.5E, 1-5E, 2-5E, 2-8E)

Part List

ID	Description
1	Model 125D & 225D (Pedrollo PQA60)
	Model 150D & 250D (Pedrollo PQ81B)
	Model 180D & 280D (Pedrollo PQA90)
	Model 2160D (Pedrollo PQ3000)
2	½" Non-Return Valve
3	Float Valve
4	Overflow Connection
5	½" Tank connector
6	Float Switch
7	½" x 15 mm Compression Coupling
8	½" Brass Tee (Twin pump only)
9	Break Tank 18L (c/w wier overflow)
10	Braided Hose
11	Combined Isolation & Drain Valve
12	Pressure Transducer (0-10 Bar, 1-6V)
	Pressure Transducer (0-16 Bar, 1-6V) (280D & 2160D)

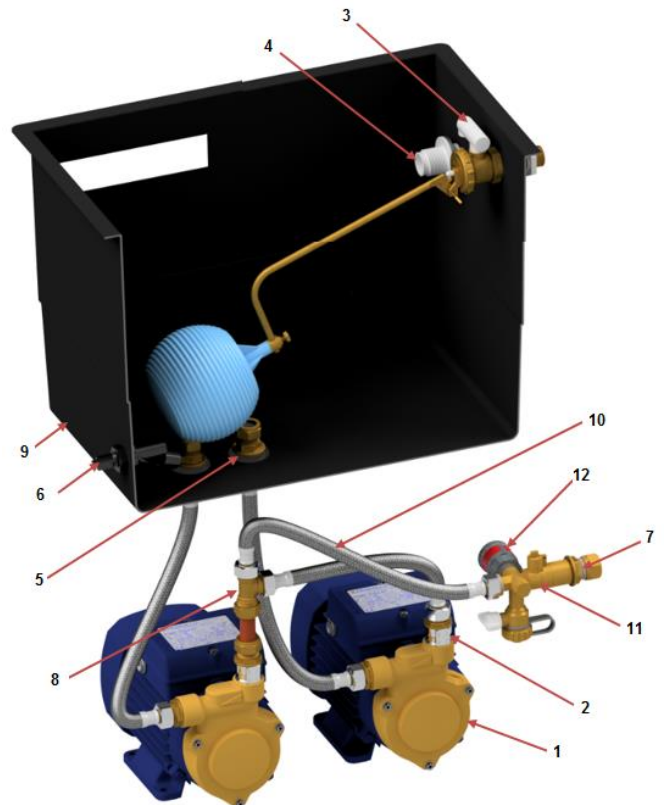

Spare kit list – PF

Kit No	Kit Description	ID	Part Description	Qty
STA12509	Pump BOSS PR13	1	BOSS PR13 PUMP	1
		*	RING CRIMP	1
		*	0.75 mm CABLE BLACK	1.03
		2	1/2 NON-RETURN VALVE	1
		7	15 mm x ½ BSP C X Mi Coupling	2
		*	15 mm x ½ BSP C X Mi Elbow	1
STA12511	Pump BOSS PR11	1	BOSS PR11 PUMP	1
		*	RING CRIMP	1
		*	0.75 mm CABLE BLACK	1.03
		2	1/2 NON-RETURN VALVE	1
		7	15 mm x ½ BSP C X Mi Coupling	2
		*	15 mm x ½ BSP C X Mi Elbow	1

Kit No	Kit Description	ID	Part Description	Qty
STA12507	Pump Flamco PQA90	1	PQA90 PUMP	1
		*	RING CRIMP	1
		*	0.75 mm CABLE BLACK	1.03
		2	1/2 NON-RETURN VALVE (PN16)	1
		7	COUPLING 15 mm x ½ BSPT 61055K	2
		*	ELBOW 15 mm x ½ BSPT M 61155K	1

STA12518	Pump Fitting Kit 1/2"bsp 0-10b	7	15 mm x ½ BSP C X Mi Coupling	2
		*	15 mm x ½ BSP C X Mi Elbow	1
		10	Flexible Hose	2
		2	Non-return valve	1

STA12515	Pressure Transducer 1-6v 0-10b	12	TRANSDUCER 10 bar	1
----------	--------------------------------	----	-------------------	---

STA12514	Mains Inlet Kit 18L tanks	3	WATER INLET BALLVALVE/FLOAT	1
		6	LOW LEVEL FLOAT SWITCH	1


(*) these parts are not shown

BOSS Midi (MD) (1-2.5E, 2-2.5E, 1-5.0E, 2-5.0E)

*Image for indication only

Part List

ID	Description
1	Model 125D & 225D (Pedrollo PQA60)
	Model 120D & 250D (Pedrollo PQ81B)
2	½" Non-Return Valve
3	Braided Hose
4	Pressure Transducer (0-10 Bar, 1-6V)
5	Mini Float Valve
6	Combined Isolation & Drain Valve
7	Overflow Connection
8	½" Brass Tee
9	Float Switch

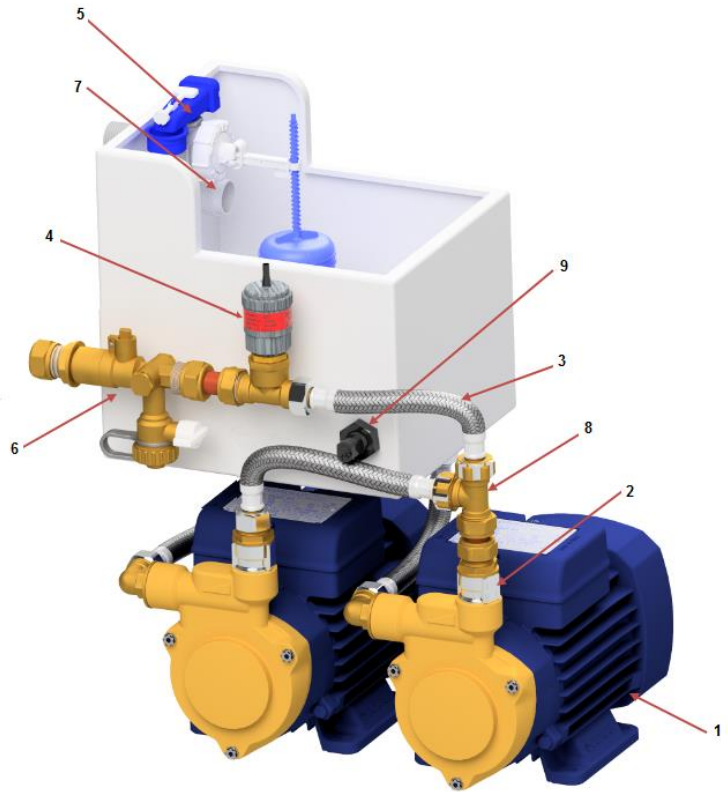

Spare kit list – MD


Kit No	Kit Description	ID	Part Description	Qty
STA12509	Pump BOSS PR13	1	BOSS PR13 PUMP	1
		*	RING CRIMP	1
		*	0.75 mm CABLE BLACK	1.03
		2	1/2 NON-RETURN VALVE (PN16)	1
			15 mm x ½ BSP C X Mi Coupling	2
		*	15 mm x ½ BSP C X Mi Elbow	1
STA12510	Pump BOSS PR11	1	BOSS PR11 PUMP	1
		*	RING CRIMP	1
		*	0.75 mm CABLE BLACK	1.03
		2	1/2 NON-RETURN VALVE (PN16)	1
			15 mm x ½ BSP C X Mi Coupling	2
		*	15 mm x ½ BSP C X Mi Elbow	1
STA12518	Pump Fitting Kit 1/2"bsp 0-10b	*	15 mm x ½ BSP C X Mi Coupling	2
		*	15 mm x ½ BSP C X Mi Elbow	1
		3	Flexible Hose	2
		2	½ BSP NON-RETURN VALVE	1
STA12515	Pressure Transducer 1-6v 0-10b	12	TRANSDUCER 10 bar	1
STA12513	Mains Inlet Kit 4-6L tanks	7	TORBECK WATER INLET VALVE	1
		9	LOW LEVEL FLOAT SWITCH	1

Mini Models (MX1-3E, MX2-3E)

*Image for indication only

Part List

ID	Description
1	ULKA Model E EP77
2	Pressure Transducer (0-10 Bar, 1-6V)
3	¼" Ball Valve
4	Overflow Connection
5	Mini Float Valve
6	Float Switch
7	8 mm Poly-tube
8	¼" BSP M x 8 mm Push-Fit
9	8 mm Push-Fit Tee
10	8 mm Hose Tail
11	¼" BSP F Tee
12	¼" Brass Locking Nut
13	Flexible Pump Support

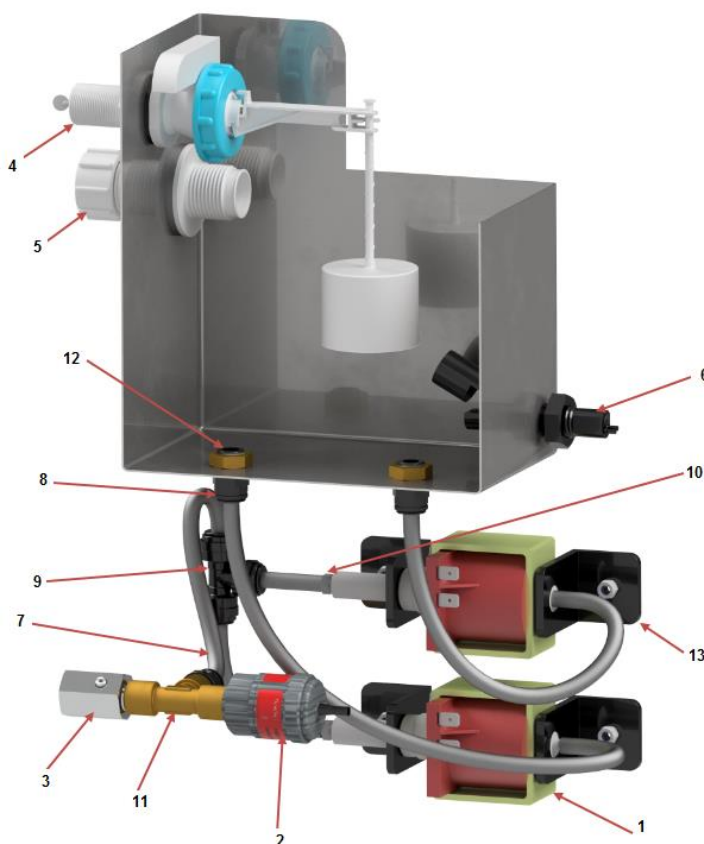

Spare kit list – Mini Digital

Kit No	Kit Description	ID	Part Description	Qty
STA12512	Pump Mini unit	1	EP77 PUMP	1
		13	SQUARE SUPPORT	2
		10	M10 X ADAPTOR	1
		7	8 mm PLASTIC TUBE	500 MM
STA12515	Pressure Transducer 1-6v 0-10b	2	TRANSDUCER 10 bar	1
STA12513	Mains Inlet Kit 4-6L tanks	4	TORBECK WATER INLET VALVE	1
		6	LOW LEVEL FLOAT SWITCH	1
STA12519	Mini Digital Pipe Fittings Kit	11	¼ BSP F Brass Tee	1
		3	¼ BSP MF Ballvalve	1
		8	8 mm X ¼ BSP M Adaptor	2
		*	8 mm Poly Tube Per Mtr	1
		9	8 mm Tee	2

Troubleshooting

If for any reason the pressurisation unit does not seem to be functioning correctly, please refer to the table below for a list of solutions to known problems.



If the pressurisation unit is showing a fault code on the display, holding down the [SET] button will cause the current system pressure to be temporarily shown on the display.

Symptom	Problem	Solution
LOW PRESSURE fault is displayed and the pumps do not run	The internal isolation valve within the unit is closed	Open the internal isolation valve
	The system pressure has fallen below the LOW PRESSURE set point	Increase system pressure using a filling loop, or enable the SYSTEM FILL option
	The SPC CONTROLLER option is enabled	Disable the SPC CONTROLLER option
	The LOW PRESSURE set point is too high	Review the system specifications
HIGH PRESSURE fault is displayed	The internal isolation valve within the unit is closed	Open the internal isolation valve
	The system pressure has risen above the HIGH PRESSURE set point	Decrease system pressure using a suitable drain point
	The expansion vessel has failed or lost its pre-charge	Check the expansion vessel pre-charge and re-charge if necessary
	The expansion vessel is undersized	Review the expansion vessel selection
	The HIGH PRESSURE set point is too low	Review the system specifications
P1 and/or P2 FLOOD LIMIT is displayed	A large amount of water has been lost from the system	Investigate cause
	The relevant pump is air-locked and not pumping water	Bleed the pump
	The unit is undersized for the system	Review unit selection
	The FLOOD LIMIT time is too short.	Consult BSS

Symptom	Problem	Solution
P1 and/or P2 FAIL is displayed	The PUMP TYPE option is set incorrectly.	Review PUMP TYPE setting
	The relevant pump has failed	Replace pump
P2 FAIL is displayed but the unit is a single pump model	The PUMPS NUMBER option is incorrectly set to 2	Set PUMPS NUMBER to 1
LOW H2O fault is displayed	The mains water supply to the unit has been isolated	Turn on the mains water supply
	The mains pressure is poor	The fault will clear once the break tank has been re-filled
	A non-standard electrical connection has been made into terminals 19 & 20	Remove all non-standard electrical connections
	The low water float switch has failed	Replace low water float switch
	The digital controller has failed	Replace digital controller
HIGH H2O fault is displayed	A non-standard electrical connection has been made into terminals 21 & 22	Remove all non-standard electrical connections
	The digital controller has failed	Replace digital controller
Pressure reading does not match actual system pressure.	The internal isolation valve within the unit is closed	Open the internal isolation valve
	The SENSOR TYPE option is set incorrectly	Review SENSOR TYPE setting
	A non-return valve has been installed between the unit and the system	Remove non-return valve
	The pressure sensor has failed	Replace pressure sensor
ERROR 1 fault is displayed	The SENSOR TYPE option is set incorrectly	Review SENSOR TYPE setting
	The pressure sensor has failed	Replace pressure sensor
Pump runs but does not make up pressure	The pump is air-locked and not pumping water	Bleed the pump
The pump is persistently becoming air-locked	The wrong/no flow restrictor is installed in the float valve (mini and midi units only)	Check float valve flow restrictor selection (mini and midi units only)

Symptom	Problem	Solution
The break tank is overfilling and discharging water to drain or over the weir	The wrong/no flow restrictor is installed in the float valve (mini and midi units only)	Check float valve flow restrictor selection (mini and midi units only)
	The float valve position is set incorrectly	Set the float valve to its lowest possible position
	The float valve has failed	Replace float valve
	A pump non-return valve has failed	Replace non-return valve
The pump is repeatedly running in short bursts	The internal isolation valve within the unit is partially closed	Fully open the internal isolation valve
	The restriction in the connecting pipe work is too great	Increase bore/ reduce number of bends/ reduce length of connecting pipe work
	A pump non-return valve has failed	Replace non-return valve
	The expansion vessel has failed or lost its pre-charge	Check the expansion vessel pre-charge and re-charge if necessary
	The point of connection of the unit is too far away from the expansion vessel	Move unit/expansion vessel connection points closer together.
The buttons on the digital controller do not respond	The plastic housing of the digital controller has come apart and the PCB has moved	Reassemble the digital controller housing and ensure that the PCB is properly seated
The digital controller parameters are being corrupted	The controller is being subject to power spikes	Fit a suitable power filter
The digital controller does not power up when the unit is switched on	The fuse has blown	Replace the fuse
	The mains power supply is at an incorrect voltage or frequency	Check mains power supply
	The 12V transformer has failed	Replace Transformer
	The digital controller has failed	Replace digital controller
SERVICE is displayed on the screen	The unit is due an annual service	Contact service engineer

Service Logs

This service log should be completed by the service engineer after each annual service.

Date		P1 COUNT	
Engineers Name		P1 HOURS	
Company		P2 COUNT	
Contact Number		P2 HOURS	
		ALARM COUNT	
		POWER INTERRUPTIONS	
Comments			

Date		P1 COUNT	
Engineers Name		P1 HOURS	
Company		P2 COUNT	
Contact Number		P2 HOURS	
		ALARM COUNT	
		POWER INTERRUPTIONS	
Comments			

Date		P1 COUNT	
Engineers Name		P1 HOURS	
Company		P2 COUNT	
Contact Number		P2 HOURS	
		ALARM COUNT	
		POWER INTERRUPTIONS	
Comments			

Date		P1 COUNT	
Engineers Name		P1 HOURS	
Company		P2 COUNT	
Contact Number		P2 HOURS	
		ALARM COUNT	
		POWER INTERRUPTIONS	
Comments			

Warranty Details

Warranty - What Is Covered?

The BOSS warranty on equipment supplied to distribution and OEM covers manufacturing defects, under our standard terms and conditions of sale.

If the unit is identified with a manufacturing defect then no charge is made for correcting the defect.

The BOSS equipment is manufactured to order and is clearly marked, where applicable, with a unique serial number, allowing traceability to both individual model configuration and the engineer or site responsible for the build and test.

Warranty - What Is Not Covered?

If a defect or problem has arisen as a direct result of the connected system, misuse, incorrect handling, incorrect installation or incorrect commissioning then any service visit is chargeable.

If a defect is identified as a manufacturing defect it will be addressed as described above, additional remedial works as a result of misuse, incorrect handling, incorrect installation or incorrect commissioning then the additional work is chargeable.

Installation costs and/or consequential losses are not covered by this agreement.

Conditions of warranty

DOS - Date Of Supply

DOC - Date Of Commissioning

Equipment	Conditions	Timescale
BOSS Pressurisation Equipment	That there is an appropriate safety valve on the system protecting the equipment. That the equipment is undamaged at the time of installation. That the equipment is not exposed to adverse environmental conditions. That the equipment is stored and installed in a frost free area. That the operating and maintenance instructions are followed. That the equipment is used for the purpose for which it was designed.	18 months DOS 24 months DOC

Contact Details

For further information please visit the BOSS Website at the following URL:

www.bssindustrial.co.uk

Alternatively, please contact the BSS technical team using the details below:

Phone: 0116 245 5940
Email: BOSStechnicalteam@bssgroup.com

[illegible]

BSS Industrial

BOSS Court
7 Barton Close
Grove Park
Leicester LE19 1SJ
United Kingdom

T +44 116 245 5940

E BOSStechnicalteam@bssgroup.com